

METCHRO.COM

INFO@METCHRO.COM

TOLL FREE 1 877 223-1753



METCHRO

IMAGINING, WORKING, SHINING

CUSTOM TRUCK ACCESSORIES

WESTERN STAR



CATALOG



METCHRO

IMAGINING
WORKING
SHINING



- Our accessories are made of premium quality 304 stainless steel grade with non-corrosive and non-magnetic properties.
- Our Fenders are made of 430 stainless steel grade using stamping or rolling process for the best performance in the industry.
- Our lights are guaranteed for one (1) year. See our lights & accessories catalogue for details.

Fender and mounting kit warranty

1. One (1) year warranty on parts.
2. Metchro Products Inc. will replace defective parts with new parts and will incur responsibility of shipping the replacements parts.
2.1 Cost of labour will be paid consistend to a predetermined amount for the warranted part that is set by Metchro Inc.
3. Chrome and zinc components are not under warranty due to the hard environments they are exposed to.
4. Warranty will only be granted if the fender is properly installed using the Metchro mounting kit.
5. Warranty does not cover damages due to accidents, abuses, mishandling of the parts, improper storage, improper installation or misusage.
6. Metchro Inc. is not and will not be held responsible for any damage or violations that may occur to the vehicle on which a Metchro part is installed. This includes, but is not limited to, paint damage, body damage and law infractions. It is solely the responsibility of the client to ensure that the part is conforming to the vehicles specifications and other laws to which the vehicle must abide.
7. This warranty is applicable only to the original purchaser.

Truck accessories warranty

1. Metchro products, excluding electrical components, are under warranty against defects in material or manship work for one (1) year from date of installation.
2. Warranty does not cover any labour cost or damages due to accidents, abuses, mishandling of the parts, improper storage, improper installation or misusage.
3. Parts with multiple components, only the defective component will be replaced.
4. This warranty is applicable only to the original purchaser
5. Metchro Inc. is not and will not be held responsible for any damage or violations that may occur to the vehicle on which a Metchro part is installed. This includes, but is not limited to, paint damage, body damage and law infractions. It is solely the responsibility of the client to ensure that the part is conforming to the vehicles specifications and other laws to which the vehicle must abide.

Sales policies

1. All invoices will be for a minimum of 100\$.
2. All claims for shortage must be made within 10 days of receiving the product.
3. All products are F.O.B. St-Hyacinthe, Québec.
4. Terms are net 30 days.
5. All applicable taxes and charges are in extra to price list.

Warranty

1. All returns and warranty claims must be done with the Metchro's consent and must have an authorization number.
2. Defective parts must be accompanied with a filled out claim form, the sales invoice and 4 pictures :
 - Picture of the entire truck
 - Picture to see the installation hardware
 - Picture of the problem
 - Picture proving that the rubber inslators were properly installed (Fenders only)

Return policy

1. All products returned for credit will be subject to a 15% restocking charge.
2. All products must be returned by prepaid freight.
3. All products must be returned in its original package and in a resalable condition.

SURFACE PREPARATION PROCEDURE FOR STICKING 3M ADHESIVE TAPE

IMPORTANT NOTICE : DO NOT USE BRAKE CLEANER TO CLEAN SURFACE

1. The truck should be in a environment having an ambient temperature of 15 to 30 degrees C.
2. Get the surface well cleaned with soapy water. Completely dry the surface.
3. Take a clean piece of cloth (no tissue papers), generously dip in isopropyl alcohol and clean the surface untill there is no firt on the cloth. Let the surface dry out (maximum 5 minutes).
4. Stick the accessory onto the cleaned surface very carefully and press the accessory on the surface with hands. (the accessory will stick instantly).
5. Let the accessory dry for 24 hours for maximum adhesion, before putting the truck in service.

Metchro Catalog Index

CAB & SLEEPER ACCESSORIES

- Bagage door trim
- Handle trim
- Sleeper panel
- Sleeper extension panel
- Window trim
- Cab panel

DAY CAB ACCESSORIES

- Dual light panel
- Air cleaner bar
- Cowl panel
- Mirror light bar
- Sun visor & visor trim
- Window Deflector

HOOD & GRILL ACCESSORIES

- Air intake light, fairing & trim
- Bug deflector & shield
- Fender trim & guard
- Front grill
- Hood panel
- Logo panel
- Side deflector

FENDER AND MOUNTING KITS


- Mounting hardware
- Quarter fenders
- Tandem (half) fenders
- Full fenders
- Round fenders

FRAME AND FAIRING ACCESSORIES

- Air line box
- Center back panel
- Mud flap hanger
- Rear frame cover
- Step cover
- 5th wheel ramp

BUMPER ACCESSORIES

- Bumper light bar
- Licence plate holder
- Foot panel
- Bumper insert

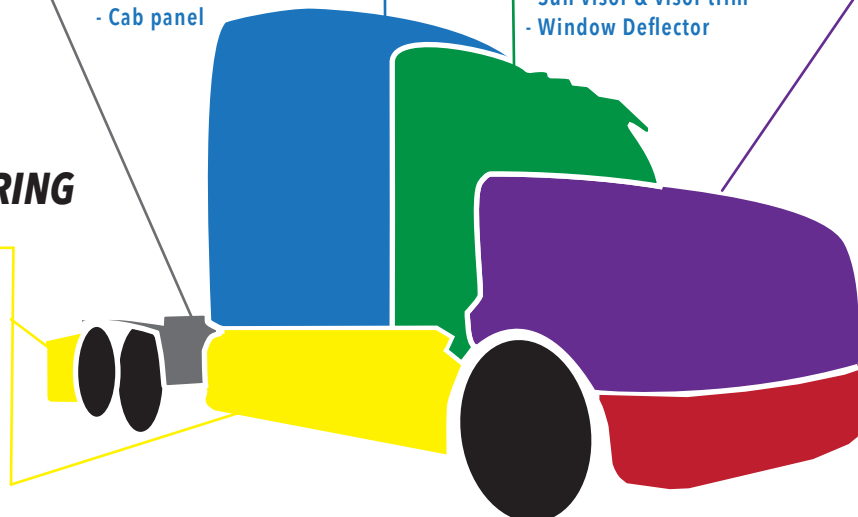

KNOWING METCHRO'S 7000 SERIES NUMBERING SYSTEM

Each digit gives important information about the part (accessories only)

S 7 1 5 1 0 0 3

The "S" prefix means that the product is made with a highly polished stainless steel (304-X10).

The same part number without the "S" prefix will result in a product made with the standard stainless steel (430BA)

This digit represents a custom truck accessory

This digit represents the truck's make :

- | | |
|-------------------|--|
| 0 = Caterpillar | 6 = Mack |
| 1 = Peterbilt | 7 = Volvo |
| 2 = Kenworth | 8 = Sterling |
| 3 = Freightliner | 9 = Universal part that fits most makes and models |
| 4 = International | |
| 5 = Western Star | |

This digit represents the location on the truck where the part is mounted :

- | | |
|-------------------------------|------------------------------|
| 1 = Bumper accessories | 6 = Side fairing accessories |
| 2 = Hood & grill accessories | 7 = Frame accessories |
| 3 = Cab (outside) accessories | 8 = Trailer accessories |
| 4 = Cab (inside) accessories | 9 = Wheel accessories |
| 5 = Sleeper accessories | K = Multiple location kit |

Suffix represents the type of lighting that will be used on the product :

- | | | |
|---------|---|--------------------------------------|
| LED | = | LED no bezel |
| LEDB | = | LED with bezel |
| LEDCA | = | Clear lense with amber LED |
| LED CAB | = | Clear lense with amber LED and bezel |
| LEDCR | = | Clear lense with red LED |
| LEDCRB | = | Clearlense with red LED and bezel |
| S | = | Made of stainless steel |
| G | = | Made of galvanized |
| P | = | Powder coated |
| R | = | Reflective tape |

These 3 digits identify the part itself

This digit represents how the part is sold :

- | | | |
|---|---|-----------------------|
| 1 | = | As a single unit (UN) |
| 2 | = | As a pair (PR) |
| 3 | = | As a kit (KIT) |



S7521001



S7521006



S7521002



S7521005



S7521003



S7521008

MODEL	PART #	DESCRIPTION
4700 SB & SF - SBA -SFA 2012 & UP	S7521005	Hood Deflector
4800 SB & TS - 2011 & UP	S7521003	Hood Deflector
4900 FA & EX - 1993 TO 2011	S7521001	Hood Deflector
4900 CO - 1993 TO 2010	S7521002	Hood Deflector
4900 SA - UP TO 2011 HIGH VISION	S7521003	Hood Deflector
4800SB-4800TS high vision hood -1993 TO 2007	S7521003	Hood Deflector
5700 EX 2016 & UP	S7521006	Hood Deflector
49X 2021 & UP	S7521008	Hood Deflector



S7522001



S7522005



S7522006



S7522008



S7522007



S7522004



S7522003

S7522010



S7522012

S7522013

MODEL	PART #	DESCRIPTION
4700 SB - 2012 & UP	S7522008	Front fender guard (PR)
4800 SA - 2011 & UP	S7522007	Front fender guard (PR)
4900 SA - 2011 & UP	S7522003	Hood side deflector (PR)
4900 SA - 2010 & UP	S7522006	Front light trim (PR)
4900 FA - ALL YEARS	S7522010	Hood side deflector (PR)
4900 FA - 2014 to 2018 ex:2010 & 2011	S7522005	Front fender guard (PR)
Constellation & 4900 EX long hood 1996 to 2009	S7522001	Front fender guard (PR)
ALL MODELS - ALL YEARS	S7522004	Logo trim (PR)
49X SBA Short hood 2021 & UP	S7522012	Front fender guard with star (PR)
49X SBA Short hood 2021 & UP	S7522014	Front fender guard without star (PR)
49X SBA Short hood 2021 & UP	S7522013	Lower Front fender guard (PR)

LOWER HOOD PANEL



S7522002

MODEL	PART #	DESCRIPTION
CONSTELLATION - 1999 & UP	S7522002	Lower hood panel (PR)

HOOD GRILL TRIM



S7521007



S7521004

MODEL	PART #	DESCRIPTION
4700 SBA - 2012 & UP	S7521004	hood grill trim
49X SBA SHORT HOOD 2021 & UP	S7521007	hood grill trim

FLATTOP - MID ROOF - DAY CAB



S7531007



S7531502



S7531014

Valid in

MODEL	PART #	DESCRIPTION
ALL MODELS -ALL YEAR MIRROR ON CAB	S7531007	Sun visors (13" 1/2 DROP)
4700 SB 2015 & UP	S7531502	Center outside windshield bar.
ALL MODELS - MIRROR ON CAB	S7531014	Sun visors (7" 1/2 DROP)


ULTRA HIGH ROOF



S7531004



S7531013 Valid in

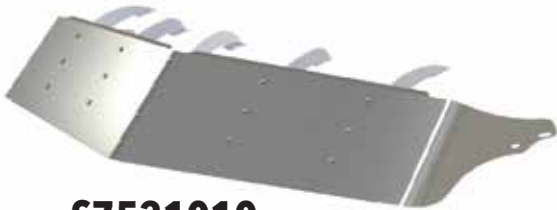

S7531010



S7531015 Valid in

MODEL	PART #	DESCRIPTION
STRATOSPHERE-4900 SF - MIRROR ON CAB - 2012 & UP	S7531004	Sun visors (13" 1/2 DROP)
STRATOSPHERE-4900 SF - MIRROR ON DOOR	S7531010	Sun visors (13" 1/2 DROP)
STRATOSPHERE-4900 SF - MIRROR ON CAB - 2012 & UP	S7531013 FOR NORTH AMERICA	Sun visors (9" DROP)
STRATOSPHERE-4900 SF - MIRROR ON DOOR - 2012 & UP	S7531015	Sun visors (9".5 DROP)

LED = LED no bezel / LEDB = LED with bezel / LEDC = LED Clear lens / LEDCB = LED Clear lens with and bezel / LEDF=LED Flatline / LEDFC=LED Flatline clear lens

GANGSTER SERIE - FLATTOP 13.6"



S7531002



S7531003-LEDB



S7531001-LED

MODEL	PART #	DESCRIPTION
CONSTELLATION - 1998 & UP EXCEPT 2006 LOW MAX & STRATOSPHERE, mirror on door MIRROR ON DOOR	S7531001-LED	Sun visors (13.6" DROP) (OVAL LIGHTS)
	S7531002	Sun visors (13.6" DROP) (BLANK)
	S7531003-LEDB	Sun visors (13.6" DROP) (ROUND LIGHTS)

DAY CAB LOW ROOF 13"



S7531016

MODEL	PART #	DESCRIPTION
49X Day Cab Bowtie - 2021 & UP	S7531016	Sun visors (13." DROP) (BLANK)

LED = LED no bezel / LEDB = LED with bezel / LEDC = LED Clear lens / LEDCB = LED Clear lens with and bezel / LEDF=LED Flatline / LEDFC=LED Flatline clear lens

AIR CLEANER BAR

CAB PANEL

MODEL	PART #	DESCRIPTION
4700 SB - 2012 & UP	S7532001	Cab panel (BLANK)
Constellation 1999 & up	S7522002	Cab panel (BLANK)
4900 - 2000 to 2017	S7522011	Air filter shrouds (PR)



S7522011



S7532001



S7541001



S7541002



S7541003



S7541004



S7541005



S7541006



S7541007



S7542001

MODEL	PART #	DESCRIPTION
CONSTELLATION - 1998 & UP	S7541001	Glove box cover (UN)
CONSTELLATION - 1998 & UP	S7541002	Lower glove box trim (UN)
CONSTELLATION - 1998 & UP	S7541003	Ceiling light trim (UN)
CONSTELLATION - 1998 & UP	S7541004	Upper dash trim (UN)
CONSTELLATION - 1998 & UP	S7541005	Lower left dash trim (UN)
CONSTELLATION - 1996 & UP	S7542001	Hood latch insert (PR)
HERITAGE - UP TO 1988	S7541006	Park brake control valve trim (UN)
ALL MODELS - 1998 & UP	S7541007	Radio trim (UN)

WINDOW DEFLECTOR / CHOP TOP

ONLY FOR WESTERN STAR TRUCKS



S7531501



S7532002



S7532003



S7532005



S7532004




S7532008



S7551002



S7551001

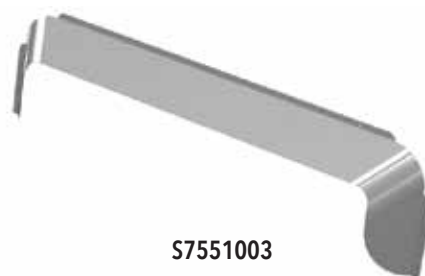

S7551003



S7533001



S7531017

MODEL	YEARS	PART #	DESCRIPTION
4700-4800-4900	2000 & UP	S7532004	Lower door trim (PR)
4900	ALL YEARS	S7551002	Baggage door handle trim
STRATOSPHERE	ALL YEARS	S7551001	Rear sleeper window deflector 2.5"
ALL MODELS	ALL YEARS	S7532002	Side window deflector (MIRROR ON CAB) (PR)
ALL MODELS	ALL YEARS	S7532003	Side window deflector (MIRROR ON DOOR) (PR) KIT 4 PCS.
ALL MODELS	ALL YEARS	S7532005	Window shade / Chop top (MIRROR ON DOOR) (PR)
STRATOSPHERE	ALL YEARS	S7551003	Rear sleeper window deflector 3"
ALL MODELS	2000 & UP	S7533001	Under window Trim (4 parts kit)
49X SBA LOW ROOF	2021 & UP	S7532008	Window shade 5.7" H (PR)
49X SBA Day Cab, Flat Top	2021 & UP	S7531017	Rear sleeper window shade 34-11/16" X 5" (UN)
ALL DAY CAB MODEL	ALL YEARS	S7531501	Rear window deflector (UN)

REAR FRAME COVER

S7571001 (7"3/8)
ALL MODELS ALL YEAR



ANTI-SAIL FLAP PLATE

S7972019
Anti-Sail Mud Flap Plate
ALL MODELS



ALL YEAR

S7571003

2 BELTS THAT HOLD THE TANK

THE PANEL BRACKET IS ATTACHED TO THE (U) BRACKET.

COME ONLY ONE SIDE SKIRT (UN)

TANK SKIRT FAIRING (68") UN



ALL YEAR

S7571002

3 BELTS 2"1/2 THAT HOLD THE TANK

THE PANEL BRACKET IS ATTACHED TO THE BELT

COME WITH TWO SIDE SKIRTS (PR)

TANK SKIRT FAIRING (68") PR



**IMAGINING
WORKING
SHINNING**



CUSTOM TRUCK ACCESSORIES

**6755 Choquette avenue, local #1
St-Hyacinthe, QC, Canada
J2S 8L2**

**TEL : 450 223-1753
FAX : 450 223-1300
TOLL FREE : 1 877 223-1753**

**METCHRO.COM
INFO@METCHRO.COM**